appEB04G

Complete User's Guide

Safety Precautions

On Battery

- Charge the battery only in temperature that ranges from 0 to 35 degree Celsius.
- Do not charge reader if the battery is found damaged or leaking.

On Operation

- Never subject reader to extremes of light, temperature, moisture or vibration.
- Do not use or store reader in a location subject:

A. Extreme high temperature, such as in a sun-heated car
B. Direct sunlight
C. High humidity or places with corrosive substances
D. Sub-zero condition, especially during winter.

. On micro SD card

- After inserting a micro SD card, if the reader has no response, please take out and insert again.
- Do not remove micro SD card or turn off reader during data writing or reading to prevent damage to data and to the reader.
- Make sure the micro SD card is unlocked before writing or deleting data in the micro SD card.
- Backup your files and data before formatting the micro SD card. Please format the micro SD card in FAT.

Contents

SAFETY PRECAUTIONS ..... **I**

CONTENTS ..... **III**

CHPATER 1 BASICS **1**

PARTS AND CONTROL 1
POWER ON AND OFF THE READER 2
CHARGING THE READER 3
IMPORTING CONTENTS 4
IMPORTING DRM CONTENTS 5
HOME SCREEN 9
MAIN MENU 10
ONSCREEN KEYBOARD 12

CHPATER 2 GETTING STARTED **13**

BOOK LIBRARY 13
READING BOOKS 14
VIEWING PHOTOS 19
FILE EXPLORER 21

CHPATER 3 SETTINGS **22**

POWER SETTINGS 22
DEVICE INFORMATION 22
SYSTEM LANGUAGE 22
DATE & TIME 22

RESET 22
DELETE ACTIVATION DATA 22

CHPATER 4 TROUBLESHOOTING 23

CHPATER 5 APPENDIX 24
MAINTENANCE 24
PRODUCT SPECIFICATIONS 24
CERTIFICATION INFORMATION 26
COPYRIGHTS AND TRADEMARK NOTICE 27
DISPOSAL AND RECYCLING INFORMATION 28
DISCLAIMER 28

Parts and Control

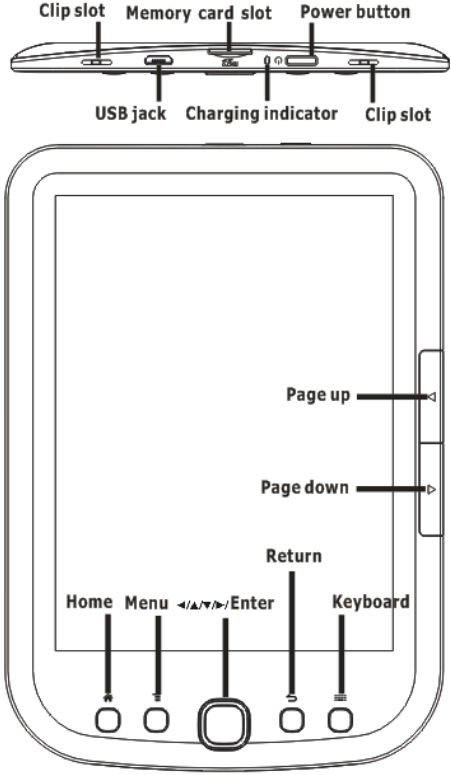

Clip slot – to insert the clip button for protective cover.

Power button – press and hold for 3 seconds to turn on/off. Press and hold for 3 seconds to restart.

◀/▲/▼/▶/ Enter button

– ◀/▲/▼/▶: the directional buttons, press up/ down/ left/ right to move cursor.

– **Enter button**: Press to confirm or cancel.

Home button – press to return to home screen.

Menu button – press to display option menu.

Return button – press once to return to previous menu, press and hold to return to Main menu.

Keyboard button – press to display/hide the keyboard.

Mini USB jack – for data transfer and emergency charging.

Power On and Off the Reader

- Press and hold the **Power** button for 3 seconds to turn on reader.
- It may take a few moments for reader to turn on and load the content.
- If Reader does not turn on, charging is required.
- To turn off reader, press and hold the **Power** button for 3 Seconds again.

Charging the Reader

- You need to charge the reader prior to using it for the first time or when battery power is low.
- Charge the reader using AC adapter with output 5V, 1.5A.
- Charging through PC may not be able to fully charge the reader due to the low output charg ing current from PC USB port.
- Please turn the reader to standby mode to shorten the charging process.
- It will take about 4 hours to fully charge the reader in standby mode .
- When the reader enters into standby mode, press the **Power** button to wake up the reader.
- The battery status is displayed at the bottom left corner. The status is shown as below:

Low battery

Charging

Battery full

Importing contents

From Computer

- The Reader supports USB Mass Storage Device function.
- To import contents (ebooks, photo etc) into the reader, connect the reader to PC via the supplied USB cable.
- Upon successful connection to PC, the reader will enter USB mode and all operation will be halted.
- Go to [My Computer], double click on the reader's disk to open.
- Perform the file management operation like USB device.

From memory card

This unit supports micro SD card up to 32GB.

To insert a memory card

Insert the card correctly with the contact pin facing downwards as illustrated below. Pushing the card in, then you should hear a click when the reader is seated correctly. You may damage the card and the reader if micro SD card is not inserted correctly.

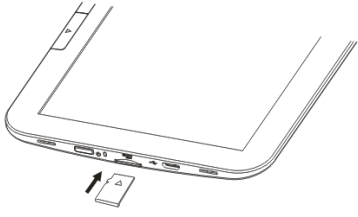

To remove micro SD card, push the card once again until it contact the back of the slot.

When the card is inserted or removed, it will take several seconds to load.

Please avoid inserting or ejecting the card when other operation is running as this may cause the system hang.

Do not remove the card if the content inside the card is being played. This will halt the operation of the reader and cause the reader to restart.

Importing DRM Contents

The Reader supports Adobe DRM contents. Adobe Digital Editions (ADE) is required.

Installing Adobe Digital Editions (ADE)

- The ADE installer is preloaded into the Reader.
- Connect the Reader to PC via the supplied USB cable and open the reader as removable disk. Go to [My Computer], double click on the reader's disk to open.
- Make sure your computer is connected to internet
- Double click on the [digitaleditions_172] file to open the installer.
- Alternatively, you can download the installer from http://www.adobe.com/products/digitaleditions/#fp.
- For first time user, you will need to get a free adobe ID from adobe website. click on the [get an Adobe ID online] link as illustrated:

- Enter your email address and complete the online form as per instructed.

Authorizing PC and Reader

- Upon registration, return to the ADE window. Enter the user name and password to activate your Adobe account.
- After activation, connect the Reader to PC. ADE will detect the Reader and you are prompted to authorize device.
- After authorization, you will be able to find the Reader recognized in ADE as below. Contents inside the Reader will be displayed on the right hand windows.

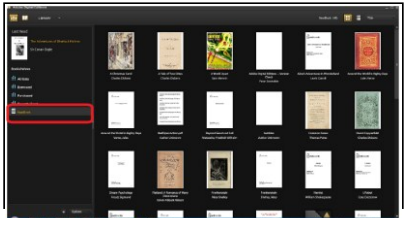

- You can now start downloading or buying ebooks from online Ebook stores supporting Adobe DRM.
- Purchased or downloaded ebooks will be stored in [My Digital Editions] in [My Documents].

Transferring DRM ebooks to Reader

- From ADE menu, click on [All Items] on the left hand column.
- Items in [My Digital Editions] will be listed down in right window.
- Select the desired item(s) to be transferred, <Shift> + <Left click> to select multiple files.
- Drag and drop the selected item(s) into the Reader's Drive located on the last row of the left side column as illustrated below.

Nc

Each ADE ID supports only 6 devices, this includes the master device (the reader) and the slave device (micro SD card).

When the reader is restored to default settings, ALL DRM activation record and data (including DRM books purchased)

will be erased from the reader. You are required to authorize the device with your ADE ID again.

When the number of authorized device has exceeded the allowable amount, you will come across the following error message:

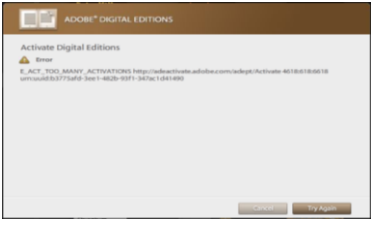

To request for extension and reset of your ADE ID, go to http://www.adobe.com/support/digitaleditions/→ [Submit a web case]. You are required to key in your ADE ID info.

Home screen

When the reader is turned on, it will enter the Home screen.

- Select the desired book to open. Selected item will be underlined.
- Press the **Home** button anytime to return to the Home screen.

1. Just added
-display the just added books.
2. Now Reading
-display last read book, press the **Enter** button to open the last read page.
3. Page indication for Now Reading
- display the last read /total page number of the Now reading book.
4. Reading history
-The recently read ebooks will be saved into Reading history, you can also read books from Reading history.
5. Page indication for Reading history
- display the last read page number of the books in reading history.
6,7. Time & Date
-display current time and date, you can set this from the [Settings].
8. Battery Indicator
-Indicate battery status during operation.

Main menu

On the home screen, press the **Menu** button to display the Main menu.

Press the Directional buttons to select the desired item, then press the **Enter** button to enter.

To exit from Main menu, press the **Return** button to exit.

Search for files from file explorer.

Enter into File Explorer for advanced file management

Enter into photo viewer.

Enter into Favourite book list.

Enter into book library

Enter into Bookmarks list.

Enter into system setting

View the user manual for BK6011

Exit from Main menu

Onscreen keyboard

Use the onscreen keyboard as shown below to enter text.

To enter text, use the directional buttons to select the text on screen keyboard, then press the **Enter** button at the panel.

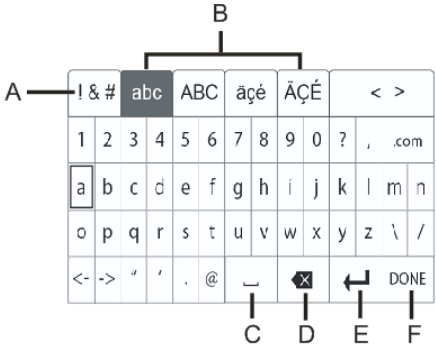

A. Numeric/punctuation/ symbol key

B. Input method key

C. Space key

D. Backspace key

E. Enter key

F. Enter key

Book library

From Main menu, select **Library** to enter book library.

- In the book library, select a book to start reading.
- Use the Directional-up/down button to scroll the e-book list.
- Press the **Page up/down** button to turn page.
- From Main menu, select **View by** to change view mode(List/Thumbnail mode).
- Supports txt, pdf, epub, pdb, fb2, html, rtf formats.

Sorting the book list

- On the book library, books are sorted by author, title, recently read, newly added, favourite etc..
- Press the **Menu** button, then select **Sort by** to choose a sorting method.
- Select the desired book to start reading.

Search for books in the library

Use search feature to search for your desired books in the library.

- From Main menu, select **Search** to display a search bar and the keyboard.
- Type the book name by using the directional buttons and Enter button at the panel, then press the **Enter Button** on the keyboard to confirm.

Note: After typing the book name, you can also press the **Keyboard** button to hide the onscreen keyboard, then press the **Enter** button to start searching.

Reading books

- Books transferred to Reader will be saved in the device.
- Reader supports eBooks in txt, pdf, epub,pdb, fb2, html, rtf, mobi format.
- From home screen or book library, use the Directional buttons to move the cursor to select book and press the **Enter** button to open.

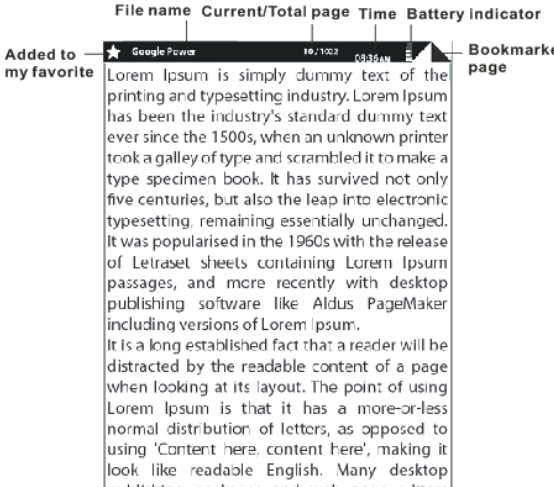
File name
Current/Total page
Time
Battery indicator
Added to my favorite
Bookmarked page
Google Power
10/1003
08:36AM
Lorem Ipsum is simply dummy text of the printing and typesetting industry. Lorem Ipsum has been the industry's standard dummy text ever since the 1500s, when an unknown printer took a galley of type and scrambled it to make a type specimen book. It has survived not only five centuries, but also the leap into electronic typesetting, remaining essentially unchanged. It was popularised in the 1960s with the release of Letraset sheets containing Lorem Ipsum passages, and more recently with desktop publishing software like Aldus PageMaker including versions of Lorem Ipsum.
It is a long established fact that a reader will be distracted by the readable content of a page when looking at its layout. The point of using Lorem Ipsum is that it has a more-or-less normal distribution of letters, as opposed to using 'Content here, content here', making it look like readable English. Many desktop publishing packages and web page editors

Page turning
On reading page, press the **Page down**/**Directional-Right** button to turn to next page. To turn to previous page, press **Page up**/**Directional-Left** button.

Using Option Menu in Reading

In reading page, press the **Menu** button to display the option menu screen. The option menu will be divided into two pages. Options available:

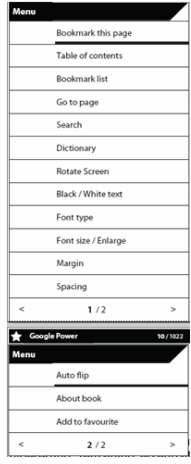

1. Bookmark this page
2. Table of contents
3. Bookmark list
4. Go to page
5. Search
6. Rotate Screen
7. Black/White text
8. Font type
9. Font size
10. Margin
11. Spacing
12. Auto flip
13. About book
14. Add to favourite
15. Reflow Mode
16. Refresh Mode

Bookmarking this page

From option menu, select **Bookmark this page** to add bookmark for the current bookpage. And the icon will appear on the top right corner.

Table of contents

From Option menu, select **Table of contents** to show the ebook's table of contents.

Bookmark list

- From option menu, select **Bookmark list** to enter Bookmark List of the current book.

Go to page

- You can jump to pages using the **Go to Page** option. In the Option Menu, select **Go to Page**.
- In Go to Page menu, type page number by the onscreen keyboard, then press the **Enter** button.

Searching

From option menu, select **Search** to search for the desired words through the current ebook.
Enter the the desired words and press the **Enter** button on the screen keyboard.

Rotating Screen

- From option menu, select **Rotate screen** to rotate the display orientation
- To return to original orientation, press **Return** once again.

Setting the font/background color

- From option menu, select **Black/White text** to set the color for font and background. Options available: **Black Mode, White Mode.**
- Select the desired option, then press the **Enter** button to confirm.

Setting Font type

- From option menu, select **Font type** to set the font type of the reading ebook. Options available: Serif, San Serif.
- Select the desired option, then press the **Enter** button to confirm.

Adjusting Font Size

- From option menu, select **Font size** to adjust font size.
- There are 5 font sizes available: Small, Medium, Large, X-Large, XX-Large.
- Select the desired font size, then press **Enter** button to adjust the font size.
- It will take several seconds for the fonts to be resized.

Zooming In/Out

- You will need to use the zooming function to enlarge images available in the eBook (epub & pdf file).
- From the option menu, select **Font size→ Enlarge**, then press **Enter** to different zoom level.
- In zoom mode, use the directional buttons to pan across the zoomed page.
- Page turning is disabled in zoom mode.
- Press the **Return** button to exit zoom mode and return to original size and resume normal book reading functions.

Setting page margin

- From option menu, select **Margin** to set page margin. Options available: 6px, 27px, 61px.
- Select the desired option, then press the **Enter** button to confirm.

Setting row spacing

- From option menu, select **Spacing** to set row spacing, options available: 6px, 27px, 61px.
- Select the desired option, then press the **Enter** button to confirm.

Auto Flip

- From option menu, select **Auto Flip** to set Auto Flip mode. The auto flip duration available are: Off, 1 Minutes , 2 Minutes , 5 Minutes,10 Minutes.
- Select the desired option, then press the **Enter** button to confirm.

About the book

From option menu, select **About the book** to display the book information, such as book title, name, author, publisher etc.

Adding to Favourite

- You can add books to your Favorite List. In Option menu, move the cursor to **Add to Favorite** to add current book into Favorite List. The ☆ icon will appear on the top left corner.
- To view books in Favourite List, from Main menu, select **Favourites**.
- To sort books in Favourite list, press the **Menu** button to select sorting method.
- To remove book from Favorite:
  From reading page, press the **Menu** button and select **Delete Favorite** from the Option Menu.

Reflow mode

- From option menu, select **Reflow mode** to reflow text on the current page, options available: On, Off.
- Select the desired option, then press the **Enter** button to confirm.

Refresh mode

- From option menu, select **Refresh mode** to set refresh mode, options available are: Partial refresh, Full refresh.
  Select the desired option, then press the **Enter** button to

confirm.

About the bookmark

Adding Bookmark

When reading, turn to the desired page, from option menu, select **Bookmark this page** to add bookmark for the current bookpage. And the icon will appear on the top right corner.

Reading from Bookmark

- From Main menu, select **Bookmarks** to enter Bookmark List.
- In the Bookmark List screen, select the desired book bookmarked, then select the page bookmarked.

Deleting Bookmark

You can choose any of the following methods to delete bookmark.

- On Bookmark list screen, press the **Menu** button to show a option menu.
- Select Delete, then move the cursor to select the desired items to be deleted.

Viewing photos

- From **Main menu**, select **Photo**, and enter into the Photo viewer.
- In photo Library, press the **Menu** button to set List mode/Thumbnail mode.
- Use the **Directional-up/down** button to navigate through the files/folders.
- Press the **Page up/down** button to turn page.

Start to view photo

- In photo library, move the cursor to the desired photo, then press the Enter button on the selected photo to view a full screen display.
- In full screen mode, press the **Directional buttons** / **Page up/down** button to view previous and next picture.

Using the option menu

In full screen mode, press the **Menu** button to display the option menu.

Zoom in/out Picture

- To zoom in picture, in full screen mode, press **Menu** → **Zoom** to change different zoom level.
- To return to original size, press the **Return** button and resume normal operation.

Rotate the picture

You can rotate the picture according to your view.

- In full screen mode, press **Menu** → **Rotate**.
- Each time you press the **Rotate** button, the picture will be rotated by 90 degrees.

Information

- In full screen mode, press **Menu→Information** to display the information about photo name,dimension, file type.

Slideshow

- In full screen mode, press **Menu→ Slideshow** to start.
- From the drop down menu, select slide time to adjust slideshow duration.
- To stop slideshow, press **Menu→ Slideshow→Off**.
- Press **Return** button to return to photo list.

File Explorer

- From **Main menu**, select **File Explorer** to enter file explorer.
- Press the Directional-up/down button to scroll through the file list.
- Press the **Page up/down** button to turn page.

Using the option menu

On file list screen, press the **Menu** button to use the option menu.

Searching for the files in file explorer

In file list, press **Menu** → **Search** to bring up the onscreen keyboard.

- Type the book name by using the directional buttons and **Enter** button at the panel, then press the **Enter** button on the keyboard to confirm.

Deleting the file

- From **File Explorer**, select the desired files to be deleted
- Press **Menu** → **Delete** to display a deletion screen, select **Yes** to delete.

Note: it may take longer time to delete files with big file size and quantity.

Sorting the files

You can sort the files by Internal storage or External storage. press **Menu** → **Sort by** to choose a sorting method.

Power Settings

To enable/disable auto power off/ sleep mode, also set the time for the auto power off/sleep mode.

Device Information

Displays product information about the reader, such as Firmware version, Internal/SD card memory status and so on.

System Language

To set system language for the reader.

Date & Time

To set the clock and date, time
Press the **Directional-left/right** button to move the cursor.
Press the **Directional-up/down** button to adjust the desired value.
Select **YES** to confirm, select **NO** to cancel the setting.

Reset

To restore the Reader's settings to defaults.
All settings will be restored. Meanwhile, all DRM contents and activation will be deleted.

Delete Activation Data

To delete the activation data in the reader. You are required to authorize the reader again through ADE after system restored.

Chapter 4 Troubleshooting

The Reader is not responding or can't be turned on.

- Reset the reader by pressing and holding the power button for 6 seconds. The reader will be forced shutdown if it is on and you are required to restart the reader again.
- Battery has been fully depleted. Please charge the reader via USB or USB AC Adapter.

Battery Life seems short

- The operating temperature is below 5°C. this is due to the characteristics of battery and not a malfunction
- The battery is not used for prolonged period. Please recharge the battery of the reader again
- The battery is not fully charged. Please charge the reader for 4 hours.
- The battery needs to be replaced. Please consult the authorized dealer for service.

A Book cannot be read

- Copyright protected books cannot be read on any device other than the authorized one.
- Check if the book has expired.
- Check if the book format is supported by the reader.

The reader cannot be operated during USB connection

- The reader cannot be operated while it is connected to PC.
- Eject the reader from computer to resume operation.
- To use the reader while charging, click on the [Safely Remove Hardware] icon located on the left lower corner to disconnect data connection with computer. After the reader is safely removed, computer will only charge the reader and you can now resume normal operation.

Maintenance

- If reader does get wet, turn off reader immediately. Wait for reader to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your reader in bag, keep reader in the protecting case supplied to avoid scratches.
- If reader needs service, please consult the authorized dealer through the contact information provided in the warranty card. Faulty service may void the warranty.

Product Specifications

Display
6.0 inch E-ink screen, 800x600 pixels
Brightness: 200cd/m^2

Storage memory
Built in memory: up to 16 GB (FAT format)
Supports micro SD card up to 32GB (FAT32 format)

Media File Format supported
Ebook: TXT, PDF, EPUB, PDF, FB2, HTML (some are supported), RTF, MOBI
Photo: jpg, bmp,gif, png

Connectivity
Data transfer: USB 2.0 High Speed
Audio: 3.5mm audio jack
Power: USB jack

Miscellaneous
Clock / Date
Real time battery indication

Battery life
Reading – up to 40 hours
Standby time- 30 days

Charging
Power supply: 5.0V, 1.5A
Duration: 4 hours (approx)

Minimum system requirement (USB Mass Storage)
Microsoft® Windows® 2000, ME, XP, Vista, Win 7
MAC OS X and Linux.

Physical properties
Dimension: 168.4X 117.5X 7.9(mm)(approx.)
Weight: 206.8g

※ Design and specifications are subject to change without prior notice

Certification information

On FCC

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

On CE

CE The symbol means that the unit complies with European safety and electrical interference directives.

Copyrights and Trademark Notice

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without vendor's permission except for personal use.

Microsoft, Windows, Windows Vista and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and / or other countries.

Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.

Adobe, the Adobe logo, Reader and PDF are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

The Reader contains Adobe® Reader® Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.

Disposal and Recycling Information

Your Reader must be disposed of properly according to local laws and regulations.
Because this product contains a battery, the product must be disposed of separately from household waste. When your eBook reader reaches its end of life, contact your local authorities to learn about recycling options.

Battery Replacement:
The rechargeable battery in it should be replaced only by an authorized service provider.

This symbol on the product or in the instruction means that your electrical or electric equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU,For more information, please contact the local authority or your retailer where you purchased the product.

Disclaimer

All the information, design and specifications contained in this manual were correct at the time of publication. However, as the product is under continuously upgrading, the final device may have a slightly difference in appearance or modified functionality than presented in this manual.

Contains Reader® Mobile technology by Adobe Systems Incorporated